Installation Instructions



Surface Fixed Cherub Page 1 of 3



Components:







Thread Lock Solution Required (Not Supplied)







Weight of heaviest part 15kg

Surface Fix



1. Carefully lay 2 x legs on a level surface and insert M10x200 bar and nuts. Using packing box as protection lay instrument note side down on the card. Line up pre


drilled holes in the backboard with the legs and ensure the instrument is aligned square with the legs. **Fix** in place using M10x100mm screws supplied (see installation guide)

2. Attach surface plates to each leg with M10x70mm and Barrel nuts supplied. (See Surface Fix Installation Sheet)

3. Fix Surface Plates to level surface using Coachscrews, Rawlbolts, chemical anchors or similar as deemed appropriate by Installer.

(It is your responsibility to ensure that the existing surface is suitable to receive the appropriate fixing)


4 Make sure all fixings are covered and secure using cover caps provided

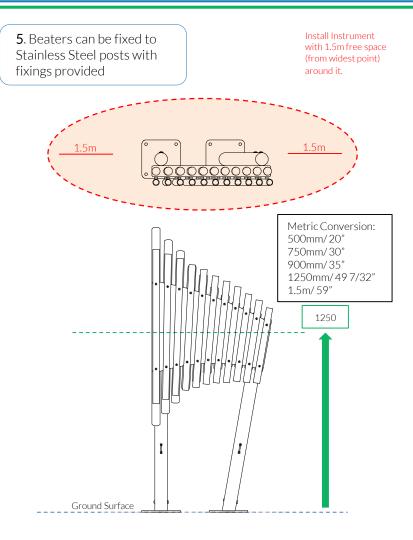



Spares available from www.musical-play.com or from your local distributor

22 Kg

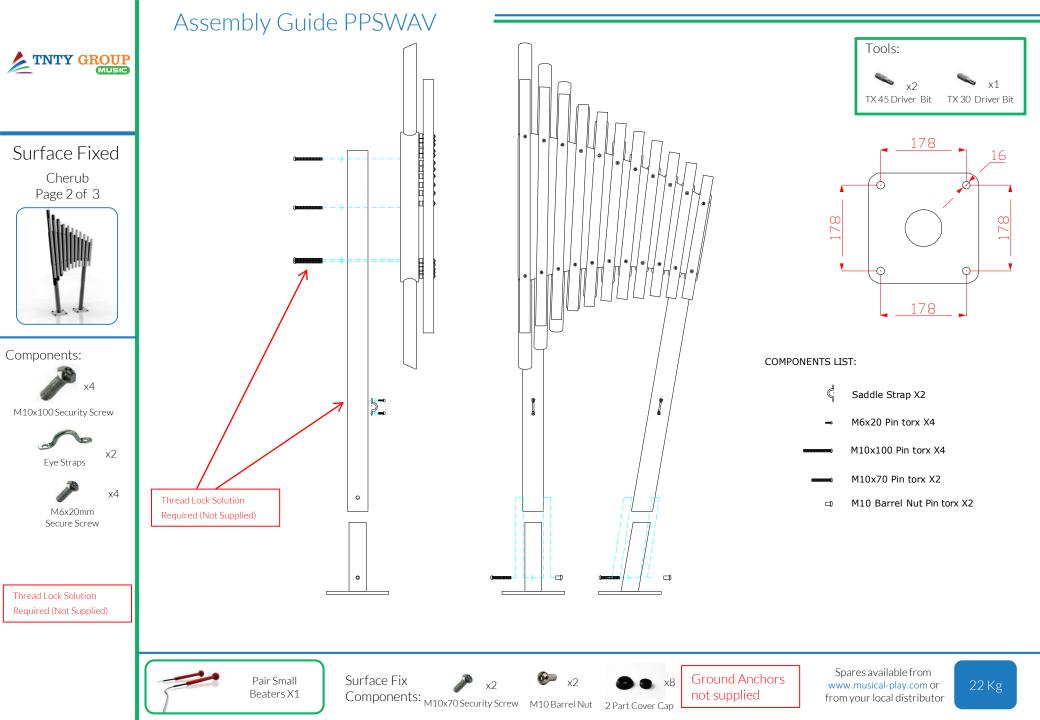





Surface Fixed

Cherub Page 3 of 3




Components:



x2 M10x70 Security Screw



Thread Lock Solution Required (Not Supplied)

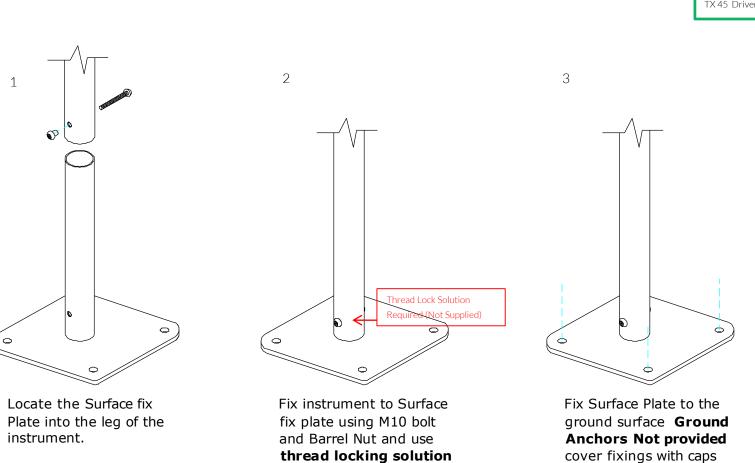

to prevent fixings working

loose.

provided