

# Installation Instructions



## Wall Fixed

Freechimes  
Alto/ Soprano



### Components:



Eye Straps  
X2



Pin Torx 25  
Driver Bit X1



10x38mm  
Secure Screw  
X4

Metric Conversion:  
700mm/ 28"  
850mm/ 33"  
1m/ 39"

1. Position Freechimes in desired location, according to correct Key stage height, this may require 2 persons.



2. Mark hole locations (X4) on backboard between 1<sup>st</sup> and 2<sup>nd</sup> notes at each end, making sure instrument is level.

3. Drill hole locations (X4) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall.

4. Fix through Backboards (X4) with suitable fixings (not supplied) in correct orientation and Key stage


5. Beaters can be fixed to Backboards or directly to wall depending on customers preference.

Install Instrument with 1m free space (from widest point) around it.

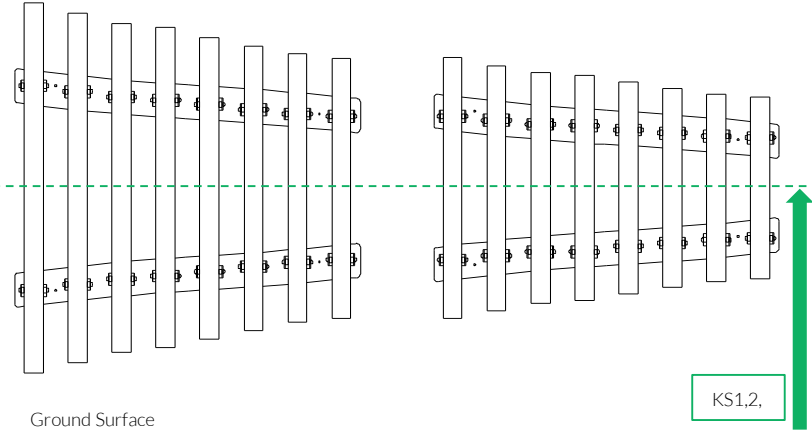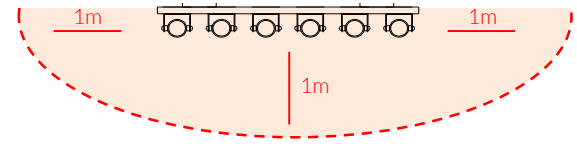

Ground Surface

KS1,2

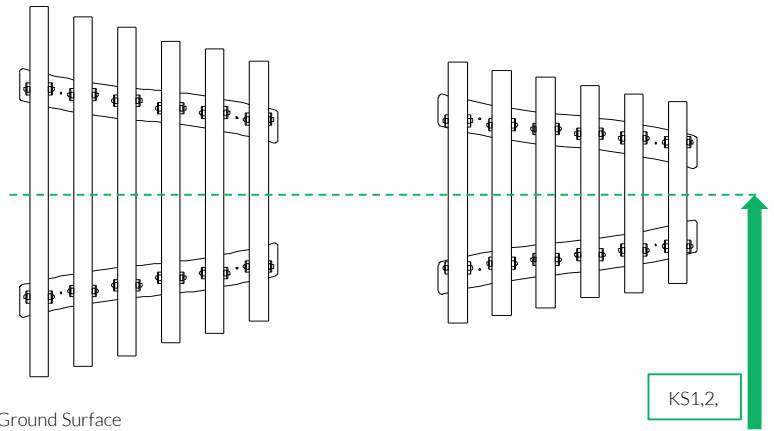

Ground Surface

KS1,2

KS1 - 700mm  
KS2 - 850mm



Pair Small/Large  
Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing.

Spares available from  
[www.musical-play.com](http://www.musical-play.com) or  
from your local distributor

9-15 Kg